

Carousel

 
Assembly Instructions

Opening Box


Ensure that you DO NOT push your knife too far into the box when cutting it open.

Lift the cardboard with one hand while cutting, thereby keeping the blade well away from your furniture.


Assembling your furniture. Please follow the following 18 steps.

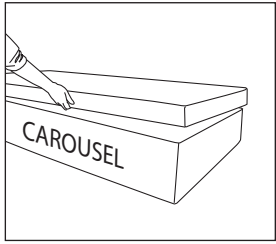


1

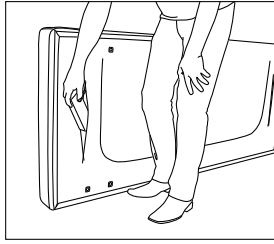 


2

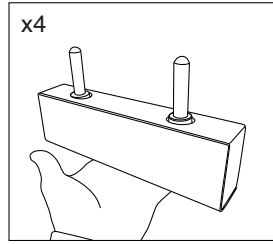 


3

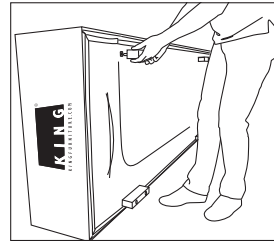 


4

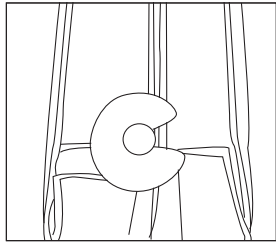 


5

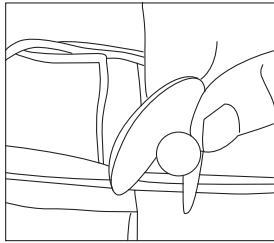 


6

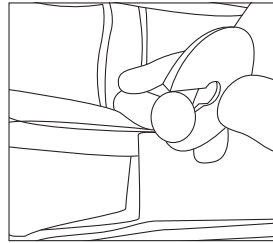 

7

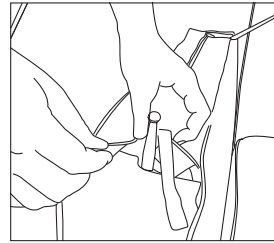 

8

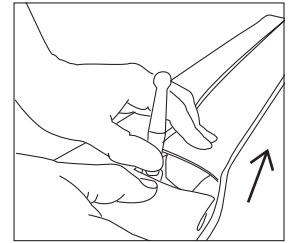 


9


Twist

Pull off and discard

 
Push

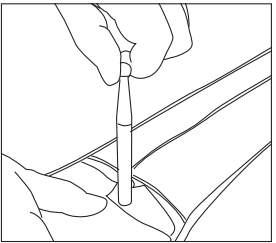


10

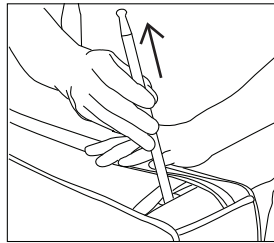 


11

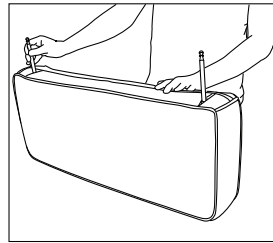 

12

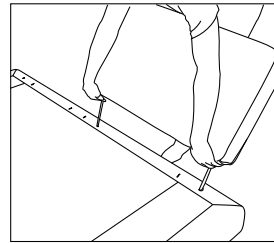 


13

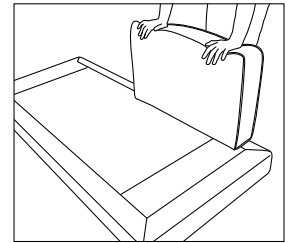 


14

 
Pull pin up until it clicks into position

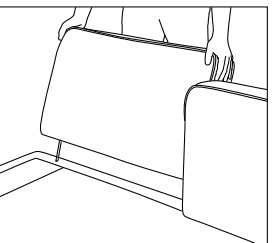


15

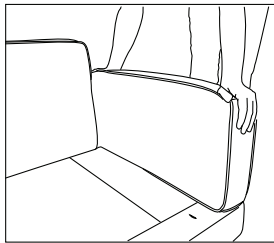 

16

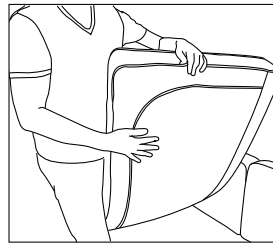 


17

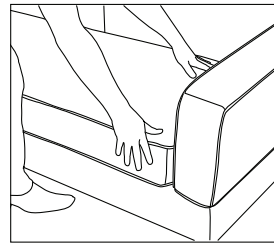 


18

 
Carousel Features

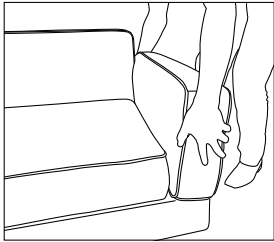

 
Pull up approx. 10cm,
then Arm/back will
drop into first
adjustment position.

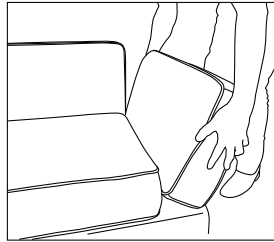


ADJUSTMENT 1

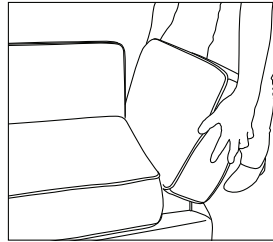 

 
Pull up approx. 10cm,
then Arm/back will
drop into second
adjustment position.

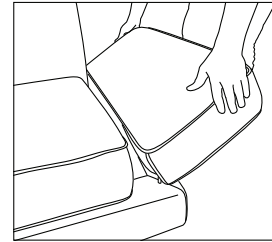

ADJUSTMENT 2

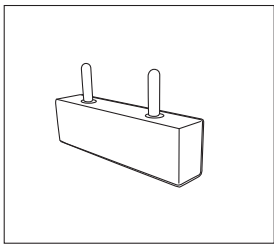 

FEET OPTION 1

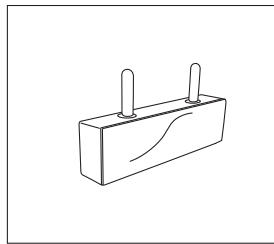 

FEET OPTION 2